

AurAir B1



Quick Start Wi-Fi Guide

Connecting the AurAir to a Wi-Fi network is easy. First step is to connect to the AurAir, so select the AurAir SSID shown in the picture below.

Note: The AurAir uses an unsecured network connection. Your network security software could issue a warning about this when trying to connect to the AurAir. Please be aware that - in case your network is password protected - that the password you enter is exposed.

WINDOWS 10

AurAir SSID


All AurAir SSID's have the same format: AurAir-B1-xxxx, where xxxx is the unique id of your device. No other AurAir product has this id.

Other SSID's

Typically the AurAir SSID is accompanied by other WiFi SSID's. You can ignore these, since they do not matter to AurAir.

Wi-Fi Button

The Microsoft Windows 10 Wi-Fi button, this is the button that needs to be active (and should therefore be blue).

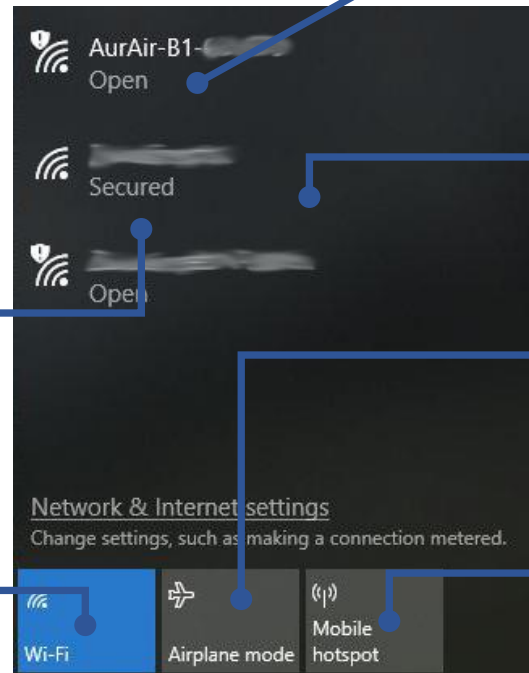

SSID List

The pop-up that is displayed if you choose open the internet access option.

Airplane Mode

Make sure this button is inactive/ gray, or else you will not be able to connect to the AurAir.

Mobile Hotspot

This button also needs to be inactive/gray.

AurAir BI



This is the Dashboard page, it is refreshed every minute to display actual values from the AurAir. Click on the settings link to continue

WINDOWS 10

AurAir Logo


The AurAir logo is displayed, so you can see that you have reached the right portal.

CO2 Value

All measured CO2 sensor values are displayed here. Healthy values are displayed in green, mediocre values in yellow and unhealthy values in red.

Settings Link

Clicking this link will lead you to the settings page.

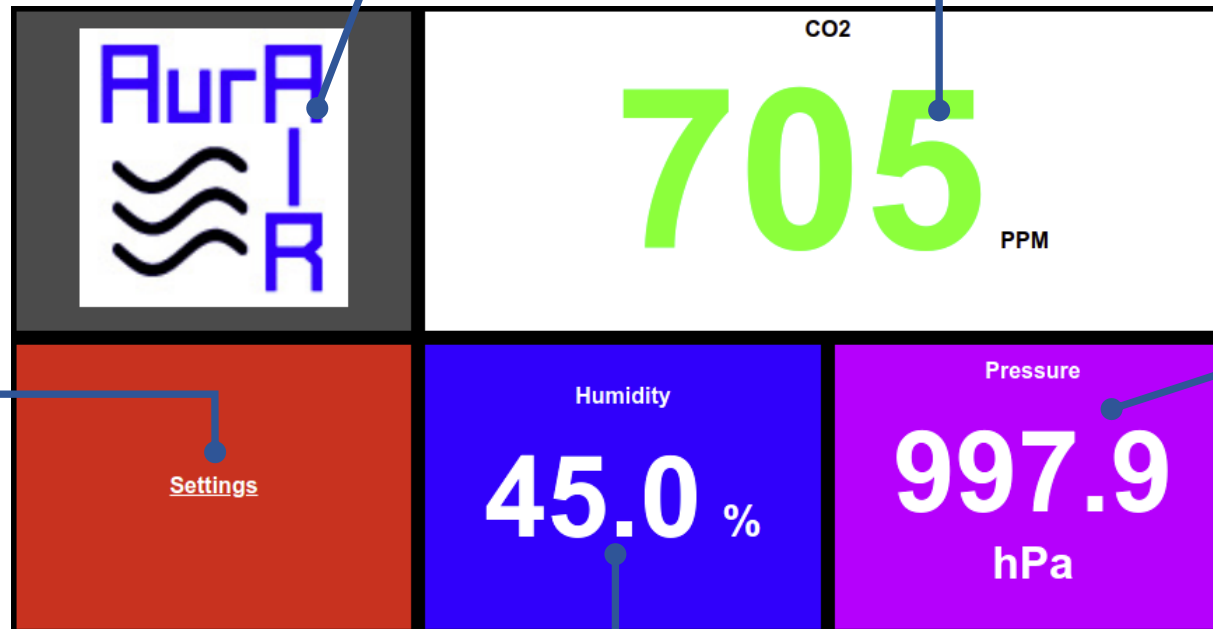

Air Pressure Value

The air pressure is displayed on the lower right side, followed by the metric unit symbol (hPa). The pressure has a single white color.

Relative Humidity

The relative humidity value is displayed on the lower left side, followed by the relative humidity unit symbol (%). The humidity has a single white color.

AurAir BI



In the AurAir settings page you can select the right SSID and enter the SSID password if the network is password protected.

Note: Since the AurAir uses an unsecure connection to connect to the WIFI, it is suggested to use/create a Guest network that is shielded from your regular private network.

WINDOWS 10

Settings Page

In this settings page the SSID can be selected and the SSID password entered if applicable.

SSID

Select from the pull down list the right SSID to connect to.

Submit Button

After selecting the right SSID and setting the SSID password, press this button to setup the AurAir for WiFi.

SSID Password

If the selected SSID has WPA protection, please enter the SSID password here.

A screenshot of the AurAir settings page. At the top left is the AurAir logo. Below it is a blue header for 'Main Settings' containing an 'Admin Password' field with a key icon. Underneath is a cyan header for 'Wifi Settings' containing a 'Select SSID' dropdown menu and an 'SSID Key' field with a key icon. Below that is another cyan header for 'System' containing a 'Reboot' button and the text 'Reboot AurAir'. Underneath is a cyan header for 'Firmware' containing an 'Update' button with a question mark icon and the text 'Update firmware'. At the bottom center is a blue 'Submit' button. Blue lines with circular endpoints connect callout boxes to these specific elements: the top callout points to the logo, the left callout points to the SSID dropdown, the right callout points to the SSID Key field, and the bottom callout points to the Submit button.

AurAir BI



Troubleshooting

Here are some of the things to keep in mind when you encounter problems with setting the Wi-Fi in the AurAir.

AurAir...	What happens?	What should I do?
After setting the right SSID, the Wi-Fi symbol on the right upper side is still an Access Point!	Reboot of the AurAir failed.	Pull the AurAir from the wall socket, wait for 20 seconds and put the AurAir back into the wall socket.